




Einbau Panoramafenster

28-EF-01

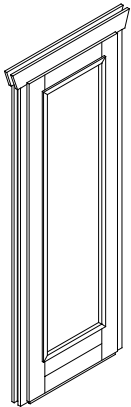

B631
5,4lfdm



3 x B432-130
130cm




1 x H20/46-00
60,2cm



! Bitte zuerst die Transportleiste vom Fenster entfernen!


! Please remove before assembling the transportslat from window!

- 6 x B106-001
- 6 x B106-002
- 2 x B100-L
- 20 x B105-0030 30mm
- 43 x B105-0040 40mm
- 4 x B105-0050 50mm
- 6 x B105-0060 60mm

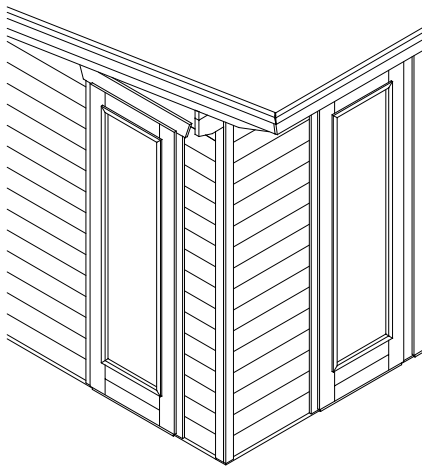


Haus Ostende
House Ostende


1.

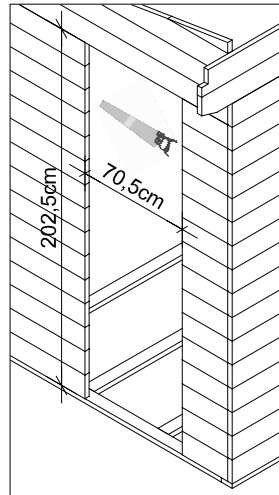


2.

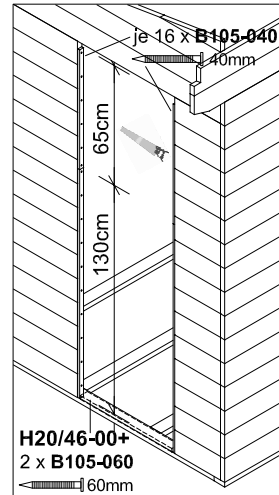

3.

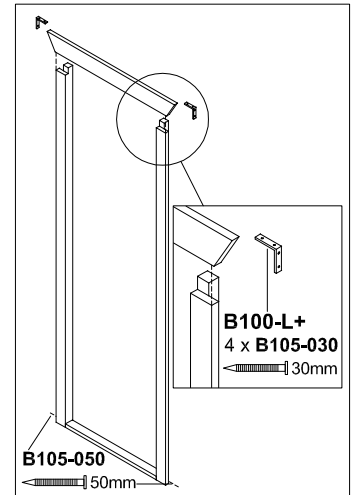

4.

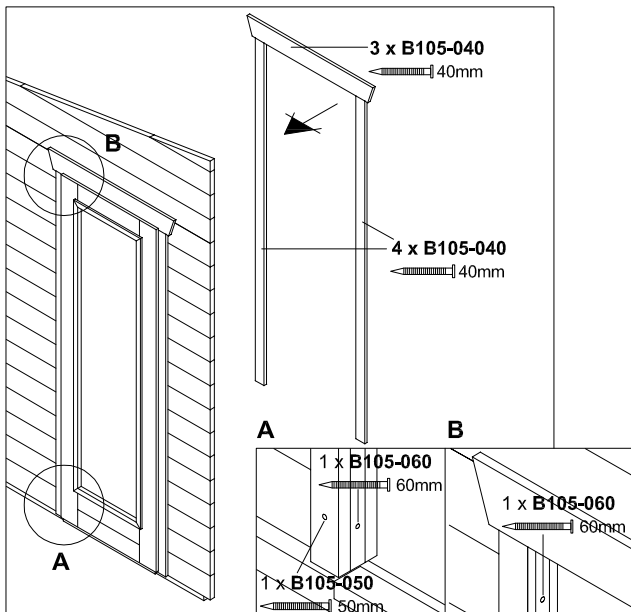

5.

